


GENERAL DESCRIPTION

QUICKEST EVER TO INSTALL


Box frame and header unit are factory assembled for fastest installation on job site. Plaster ground on frame accepts up to 1/2" (13mm) drywall material or can be trimmed for 1/4" (6.3mm) paneling. Horizontal members provide solid support for wall materials, and the center member is located at 48" (121.9cm) center for horizontal drywall installations. Standard track and tricycle hangers are 111 Series, but for heavier doors, the 100 Series track and hanger is available.

An adjustable steel bracket on the header fastens directly to the rough cut stud at opening side. This allows finish jamb to be installed after the rough construction is completed, preventing damage to finishing materials. (Finish jamb not included.)

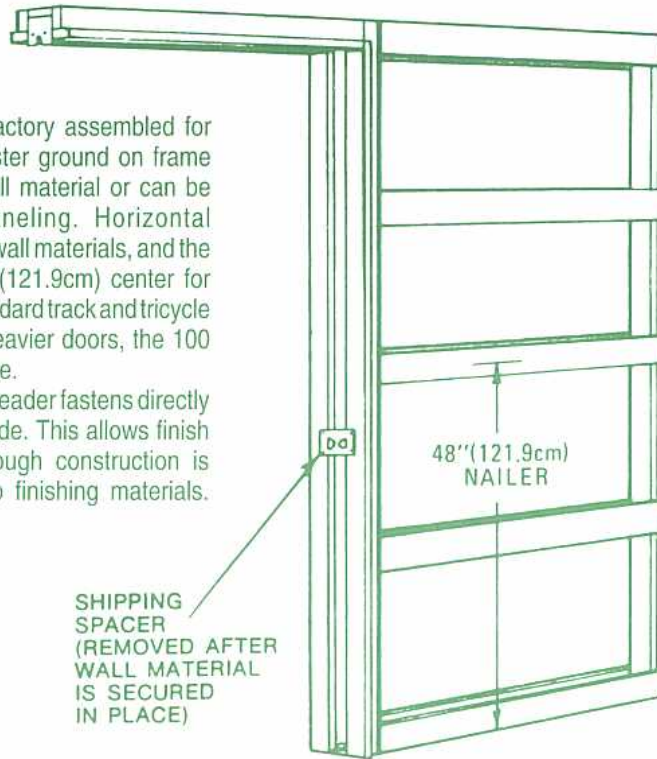


SHIPPING SPACER (REMOVED AFTER WALL MATERIAL IS SECURED IN PLACE)

EXCEPTIONAL FEATURES

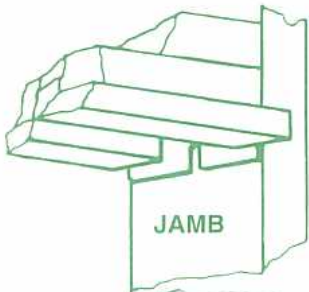


STEEL NAILER BRACKETS

Steel header bracket nails to rough stud. Steel floor bracket easily nails to sub or slab floor. To prevent damage, finish jamb can then be installed later.

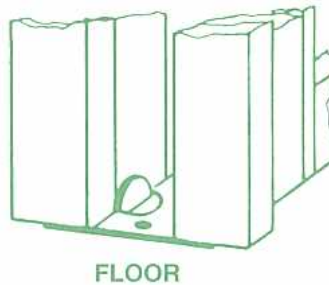

REMOVABLE TRACK

Track is removable for maintenance if necessary. Convex rail features one point contact, two dust traps.

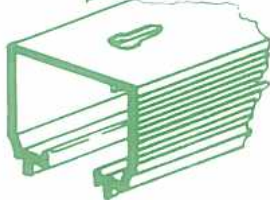

STEEL STIFFENER

Full length, special steel stiffeners assure strong straight jambs.



PROTECTED SHIPPING

Frame is shipped knocked down, covered on face edges to prevent damage.



6' 8" HEIGHT
in 5 WIDTHS


PREFABRICATED

**POCKET
DOOR
FRAME**

For 1-1/8"
(28.6mm)
OR 1-3/8"
(35mm)
DOORS TO
80 LBS.
(36K)

SERIES 2711/2710


**COMPLETE WITH SCREWS
AND INSTRUCTIONS**

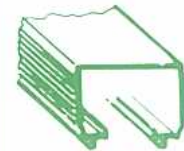

No. 111
ALUMINUM TRACK



No. 1513
BUMPER




No. 1550
NYLON GUIDES
(WOODTONE)



No. 1712
ADJ. WRENCH




No. 1020
3/4" (19mm)
WHEELS

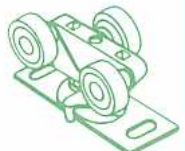

No. 1025
3/4" (19mm)
BALL BEARING
WHEELS

For doors up to
125 lbs. (56.7K)

OPTIONAL TRACK (2710)

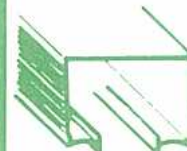

No. 100
ALUMINUM TRACK

For doors up to
125 lbs. (56.7K)



No. 1120
1" (25.4mm)
WHEELS

FOR DOORS UP TO 200 LBS. (90.7K)
1125 BALL BEARING TRICYCLE
HANGERS ARE AVAILABLE FOR USE
WITH 100 TRACK.



6' 8" HEIGHT
in 5 WIDTHS

PREFABRICATED

POCKET DOOR FRAME

For 1-1/8" (28.6mm)
OR 1-3/8" (35mm)
DOORS TO
80 LBS.
(36K)

SERIES 2711/2710

OPTIONAL ACCESSORIES



No. 1555 FOR 100-111 TRACK
CONVERGING DOOR KIT FOR
JOINING 2 POCKET DOOR FRAMES




No. SUNCREST
PRIVACY DOOR LOCKS FOR
1-3/8" (35mm) DOORS
(WITH EMERGENCY RELEASE)



No. 21 PULL



No. 30 PULL
2-1/8" DIA.
(54mm DIA.)



No. 35 PULL
1-3/8" x 3"
(35mm x
76.2mm)



No. 40 PULL
1-3/8" x 3"
(35mm x
76.2mm)

NOTE: All locks, latches and pulls above
furnished in three decorator finishes.




No. 20 PULL
1-3/4" (44.5mm)
WOODTONE
NYLON



No. 150 EDGE PULL
US3 BRIGHT BRASS
US26D SATIN CHROME


GENERAL INSTALLATION

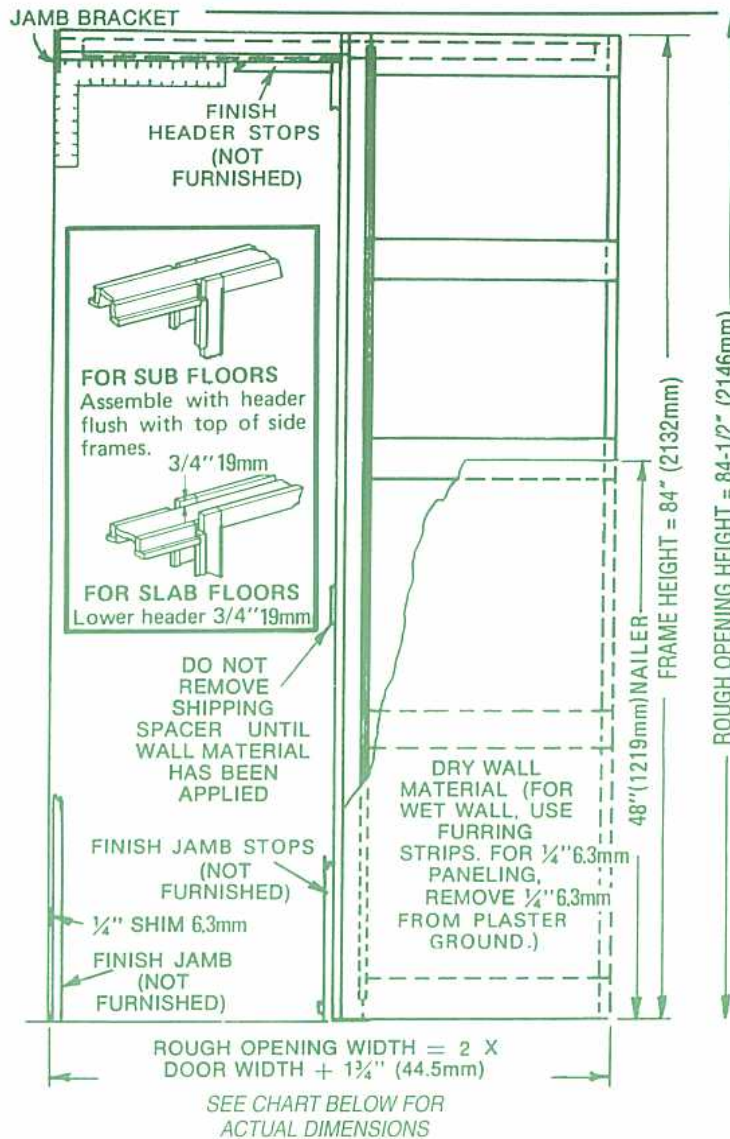

Cross sections
of header
showing
available track.




2711

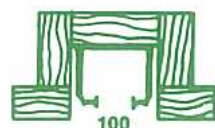

2710

LOCATION OF HANGERS

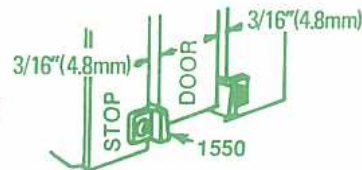

Nail header onto box frame, square with jamb. Place frame into rough opening and shim until jambs are perfectly vertical and track is absolutely level. (Door will not stay in position if track is not level.) Nail into opening.

Apply wall material BEFORE REMOVING SPACER BLOCKS. Make sure nails do not penetrate into pocket, or door will be damaged. Remove spacers. See note on sealing doors before installing bumper or installing door hanger plates.

Install bumper on back edge of door 40" from bottom of door.

Center hanger plates on top of door 2" (50mm) from each edge. Insert hanger pin into door plates and lock in position with nylon clip. Slide door into pocket

and apply finish stops (not furnished), allowing 3/16" (4.8mm) on each side of door to allow for any door warpage. Use flat head screws (provided) to fasten the header stop on the side of the door that the nylon clips are on. This will facilitate removing the door, if so desired, at a later date.

Fasten door guides at bottom and adjust for smooth operation.

NOTE: Wood doors MUST be sealed on all four edges and both faces PRIOR to installation. Maintain the recommended 3/16" (4.8mm) clearance between door and jamb stops. These precautions will ensure continued ease of door operations without the problems of serious door warpage.

ORDER NO.	FOR 1-1/8" TO 1-3/8" THICK DOORS (28.6 MM) (35MM)	ROUGH OPENING HEIGHT & WIDTH	SHIPPING DATA WEIGHT EACH
27112068	1 - 2'0" (609.9mm) x 6'8" (2032mm) door	84 - 1/2" (2146mm) x 49-3/4" (1264mm)	23 lbs. (10.4K)
27112468	1 - 2'4" (711.2mm) x 6'8" (2032mm) door	84 - 1/2" (2146mm) x 57-3/4" (1467mm)	26 lbs. (11.8K)
27112668	1 - 2'6" (762.0mm) x 6'8" (2032mm) door	84 - 1/2" (2146mm) x 61-3/4" (1569mm)	27 lbs. (11.8K)
27112868	1 - 2'8" (812.8mm) x 6'8" (2032mm) door	84 - 1/2" (2146mm) x 65-3/4" (1670mm)	28 lbs. (11.8K)
27113068	1 - 3'0" (914.4mm) x 6'8" (2032mm) door	84 - 1/2" (2146mm) x 73-3/4" (1873mm)	31 lbs. (11.8K)